

## Conexiones de la barra de Luces de Aviso

### PLAE-1 (Entradas)

Función / Control	Nº de pin del conector	Conector	Color del Cable	Nº entrada Placa Master	Grupo de entradas
Interruptor Posicion DME1	1	J3 (Master2)	NARANJA	73	1 (Master 2)
Interruptor Posicion DME2	3	J3 (Master2)	VERDE	76	1 (Master 2)
Pulsador AP Master	5	J3 (Master2)	AMARILLO	80	1 (Master 2)

### PLAS-1 (Salidas)

Función / Control	Nº de pin del conector	Conector	Color del Cable	Nº entrada Placa Master	Grupo de entradas
Led Aviso STALL	24	J2 (Master1)	NARANJA	32	Master 1
Led Aviso OVERSPEED	25	J2 (Master1)	MARRON	33	Master 1
Led Aviso GEAR UP	26	J2 (Master1)	MORADO	34	Master 1
Led Aviso LEFT ALTR	27	J2 (Master1)	GRIS	35	Master 1
Led Aviso RIGHT ALTR	28	J2 (Master1)	AZUL	36	Master 1
START	29	J2 (Master1)	AMARILLO	37	Master 1
(SIN USO)	30	J2 (Master1)	VERDE	38	Master 1
Marker I (Blanco)	31	J2 (Master1)	BLANCO	39	Master 1
Marker O (Azul)	32	J2 (Master1)	AÑIL	40	Master 1
Marker M (Naranja)	33	J2 (Master1)	ROSA	41	Master 1
Led AP Master ON	34	J2 (Master1)	AZUL(2)	42	Master 1

## Displays

FUNCION	DIGITO 1	DIGITO 2	DIGITO 3	DIGITO 4	DIGITO 5	Pines / Placa Displays
DME 1/2	GRIS	MORADO	ROSA	AZUL	MARRON	11, 12, 13, 14, 15 / 5