

LIGHTS

STRB BCN NAV PANEL TAXI LDG

OFF

R L BOTH OFF START R L BOTH OFF START

The panel features six indicator lights labeled STRB, BCN, NAV, PANEL, TAXI, and LDG. A bracket labeled 'OFF' spans all six lights. Below the lights are two rotary switches. Each switch has four positions: 'OFF' (indicated by a downward-pointing arrow), 'START' (indicated by an upward-pointing arrow), 'R', and 'L'. A bracket labeled 'BOTH' spans the 'R' and 'L' positions of each switch.

MASTER

BAT L ALT R ALT

AVIONICS MASTER

PROP SINC

OFF OFF

The panel contains five indicator lights. A bracket labeled 'MASTER' spans the first three lights (BAT, L ALT, R ALT). A bracket labeled 'OFF' spans the last two lights (AVIONICS MASTER, PROP SINC).

ICING

PITOT PROP BOOT

FUEL PUMP

L R

NAV

PARK BRAKES

PULL ON

GPS

OFF OFF

The panel features five indicator lights and one rotary switch. A bracket labeled 'ICING' spans the first three lights (PITOT, PROP, BOOT). A bracket labeled 'OFF' spans the last two lights (NAV, GPS). The 'FUEL PUMP' section has two indicator lights labeled 'L' and 'R', with a bracket labeled 'OFF' below them. The 'PARK BRAKES' section has a rotary switch labeled 'PULL ON'.

